




Dimensions

POTAIN HDT 80

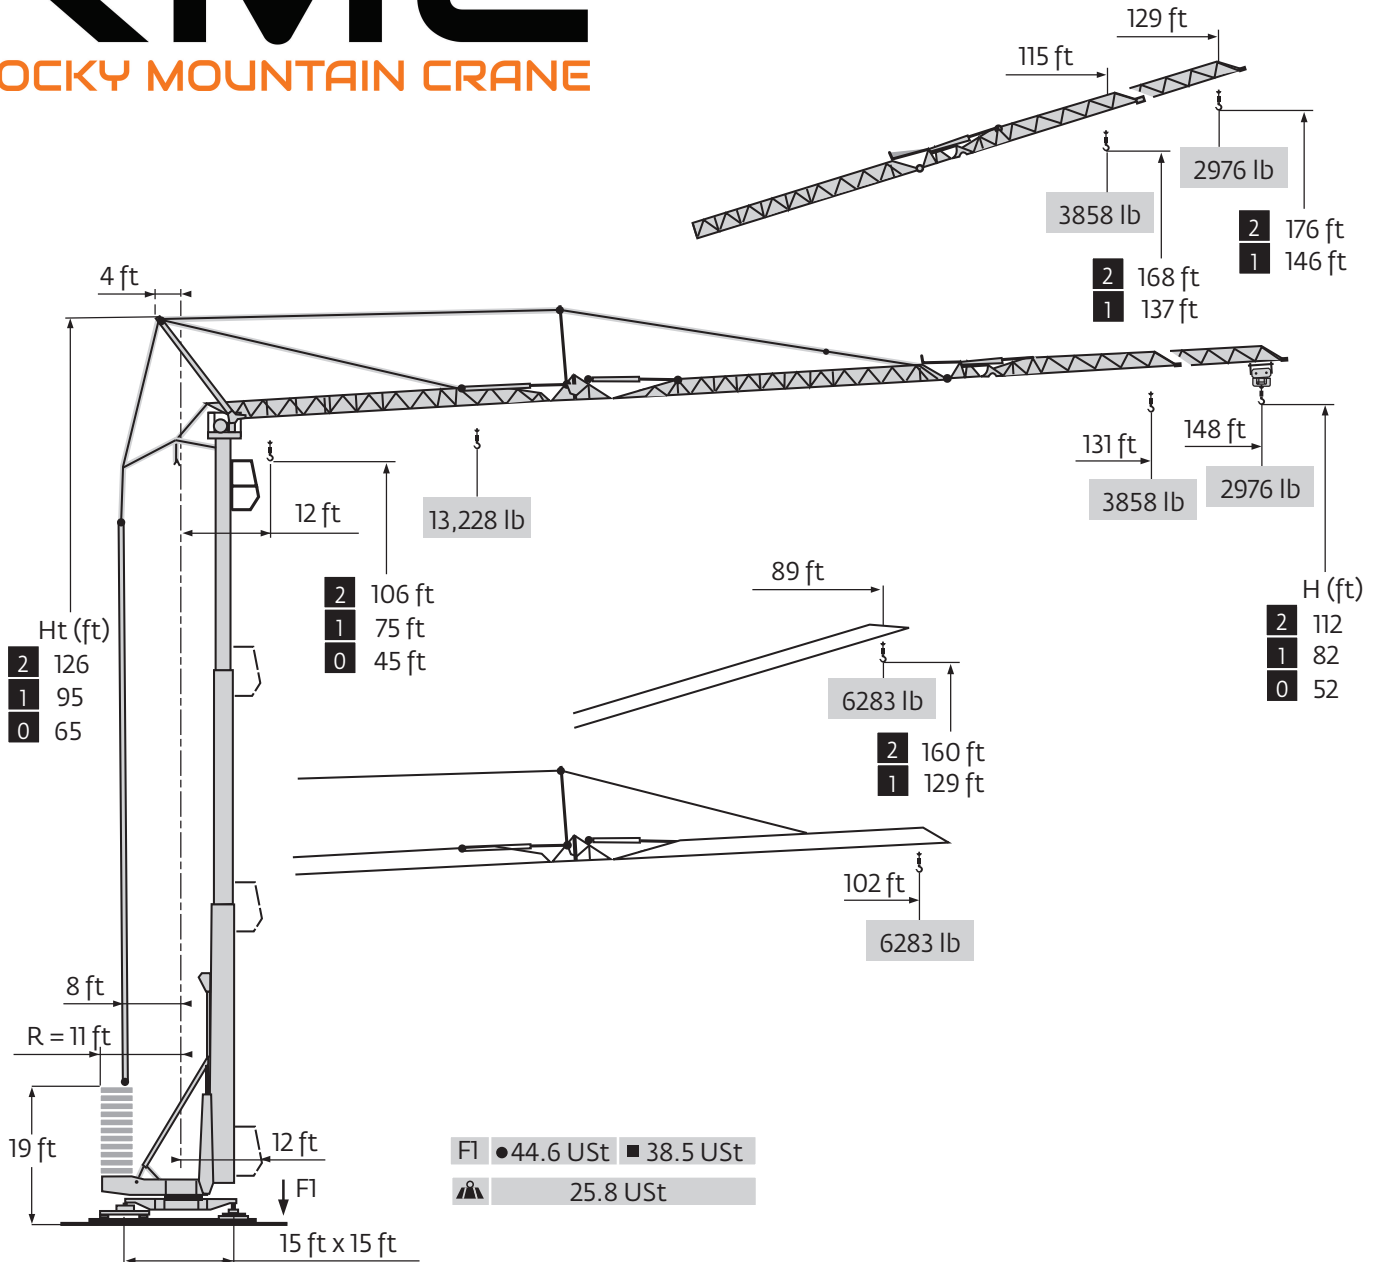


Rocky Mountain Crane
208-500-0101
www.rockymtncranes.com

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.


Load charts




148 ft	11	▶	44	49	56	66	72	78	82	89	98	105	115	121	131	138	148	ft
 			13,228	11,321	9678	7915	7022	-	5975	5423	4740	4365	3880	3605	3241	3031	2756	lb
								6614	6195	5644	4960	4586	4101	3825	3461	3252	2976	lb
131 ft	11	▶	47	49	56	66	72	82	85	89	98	105	115	121	131			ft
 			13,228	12,478	10,681	8741	7771	6636	-	6030	5280	4861	4332	4034	3638			lb
								6614	6250	5501	5082	4553	4255	3858			lb	
102 m	11	▶		54	56	66	72	82	89	97	98	102						ft
 				13,228	12,621	10,351	9226	7893	7187	-	6316	6063						lb
									6614	6537	6283							lb

 

148 ft	11	▶	46	49	56	66	72	82	83	89	98	102	ft
			13,228	12,247	10,483	8576	7628	6504	-	5908	5181	4960	lb
								6614	6129	5401	5181		lb
131 ft	11	▶	49	49	56	66	72	82	88	89	98	102	ft
			13,228	12,985	11,133	9105	8102	6923	-	6283	5512	5291	lb
								6614	6504	5732	5512		lb

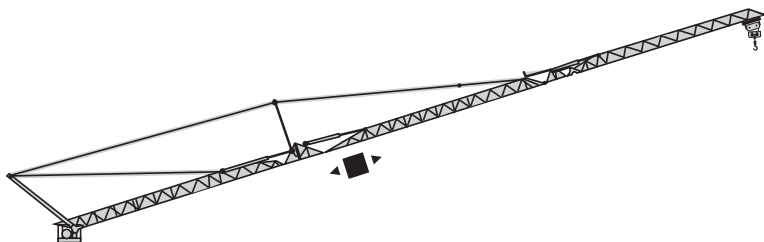

148 ft	11	▶	66	68	72	82	89	98	105	115	121	129	ft
			6614	-	5941	5049	4564	3968	3649	3230	2987	2756	lb
			6614	6162	5269	4784	4189	3869	3450	3208	2976	lb	
131 ft	11	▶		72	74	82	89	98	105	115		ft	
				6614	-	5611	5093	4442	4079	3638		lb	
				6614	5831	5313	4663	4299	3858	lb			
102 ft	11	▶			83	85	89	ft					
					6614	-	6063	lb					
					6614	6283	lb						

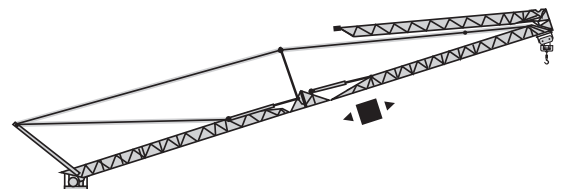


148 ft	11	▶	71	72	73	82	89	ft
			6614	6471	-	5501	4960	lb
				6614	5721	5181		lb
131 ft	11	▶		74	76	82	89	ft
				6614	-	5864	5291	lb
					6614	6085	5512	lb

Rocky Mountain Crane
208-500-0101
www.rockymtncranes.com


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Crane profile and working range

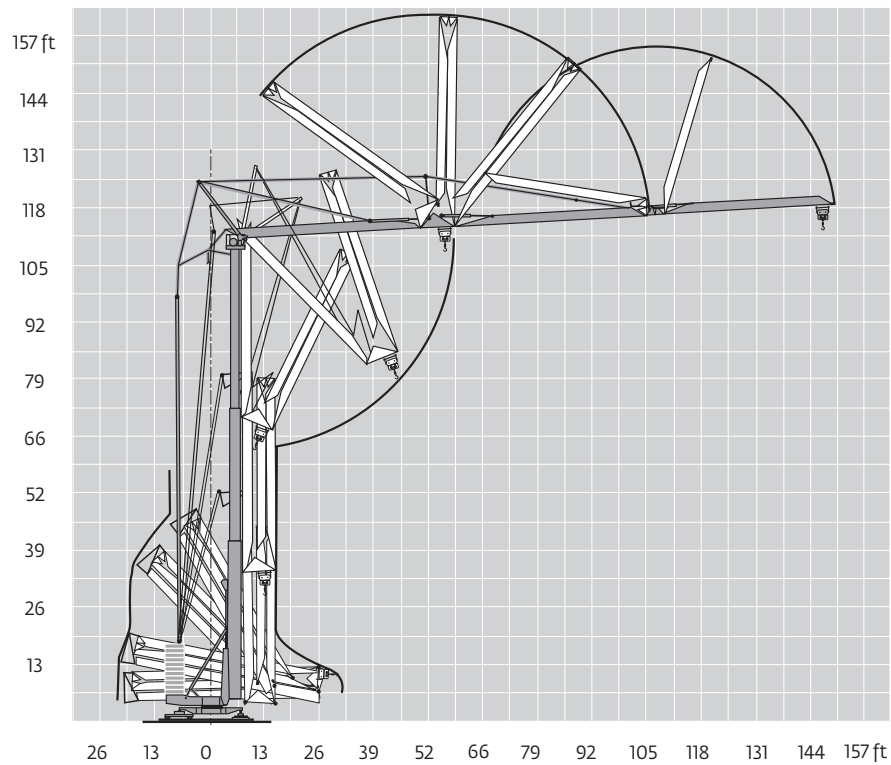

HDT 80: jib raised 30°

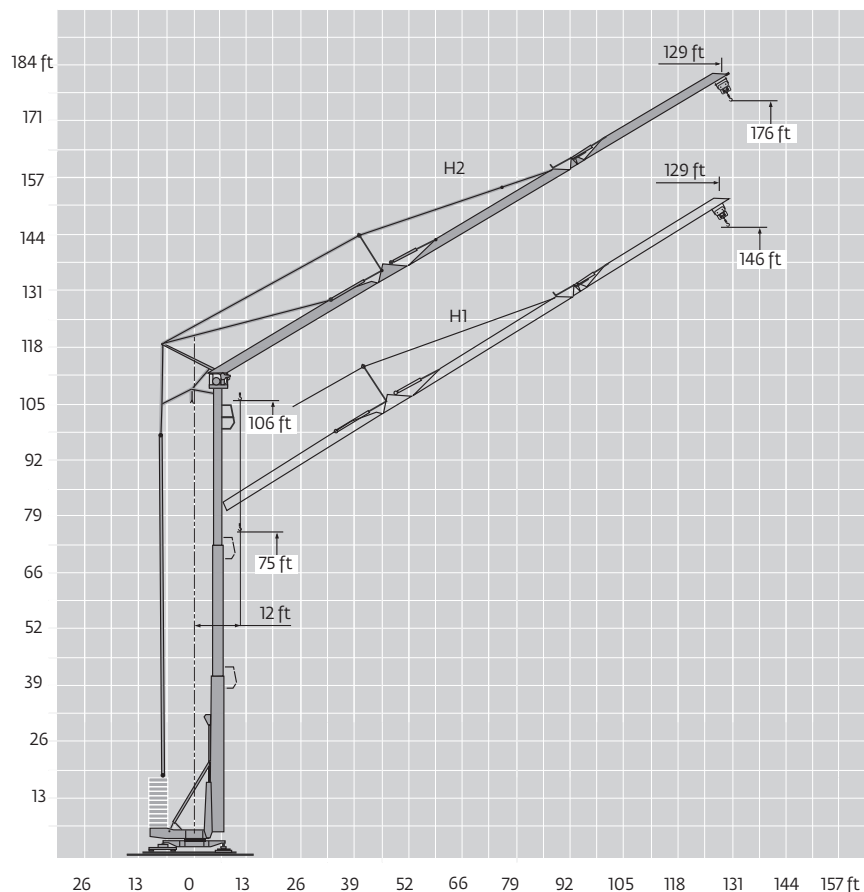

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane

Mechanisms

													hp	kW
	20 LVF 15	fpm	13	85	138	171	223	7	43	69	85	112	20	15
		lb	6614	6614	3968	3086	1543	13,228	13,228	7937	6173	3086		
	5 DVF 5	fpm	30 - 73 - 191 (6614 lb)					30 - 73 - 145 (13,228 lb)					6.5	4.8
	RVF+61	rpm	0 - 0.8										8	5.9

CEI 38 	IEC 38	kVA
480V (+6% -10%) 60 Hz		20 LVF 15 : 43 A

	Hoisting
	Trolleying
	Slewing
	Traveling

Power Requirements

480V/60HZ - 62A max
 *480 V phase to phase
 *277 V phase to Ground
 *75A fuse protection
 *WYE connection
 *NO DELTA CONNECTION

Minimum Generator 45kW
 Supply Cable
 *3 hot + ground
 *No neutral
 *4 AWG wire

Transformer
 *No open Delta connection

Rocky Mountain Crane
208-500-0101
www.rockymtncranes.com

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.